

ZOLL EMV+ Ventilator

PM Due Alarm



ZOLL EMV+ Ventilator - PM Due Alarm

- The PM Due Alarm will occur at startup when the last annual preventative maintenance is greater than 365 days.
- This is a low-priority message to help remind the user that an annual maintenance and calibration is due.
- The ZOLL EMV+ ventilator is still operational and can be used on patients.
- When appropriate, the ventilator should be sent for preventative maintenance.



Step 1

• Turn the ZOLL EMV+ on.

Note: After the EMV+ is turned on, the PM Due alarm will be displayed.






Step 2

 Press Red "X" button to silence the alarm and to clear the display.


Note: After the Red "X" button has been pressed, the Start Menu will be displayed, allowing you to select a patient size.

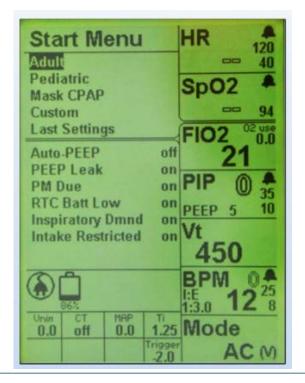



Step 3

- Select Patient Adult or Peds
- Press Green "√" ACCEPT
 - For Adult Patients

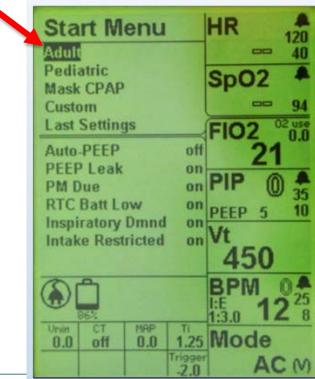



Step 4

Press Menu Button

Note: After the menu button is pressed the display will show the Menu items and the Alarm Config menu item will be selected.







Step 5

Press Green "√" ACCEPT

Note: After the "Accept" button is pressed the display will show the Alarm Config items.

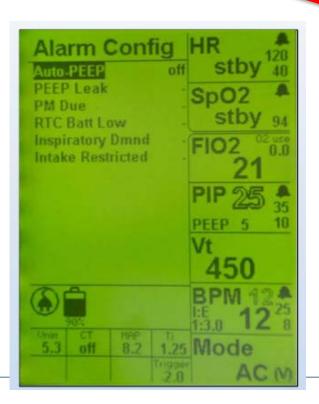



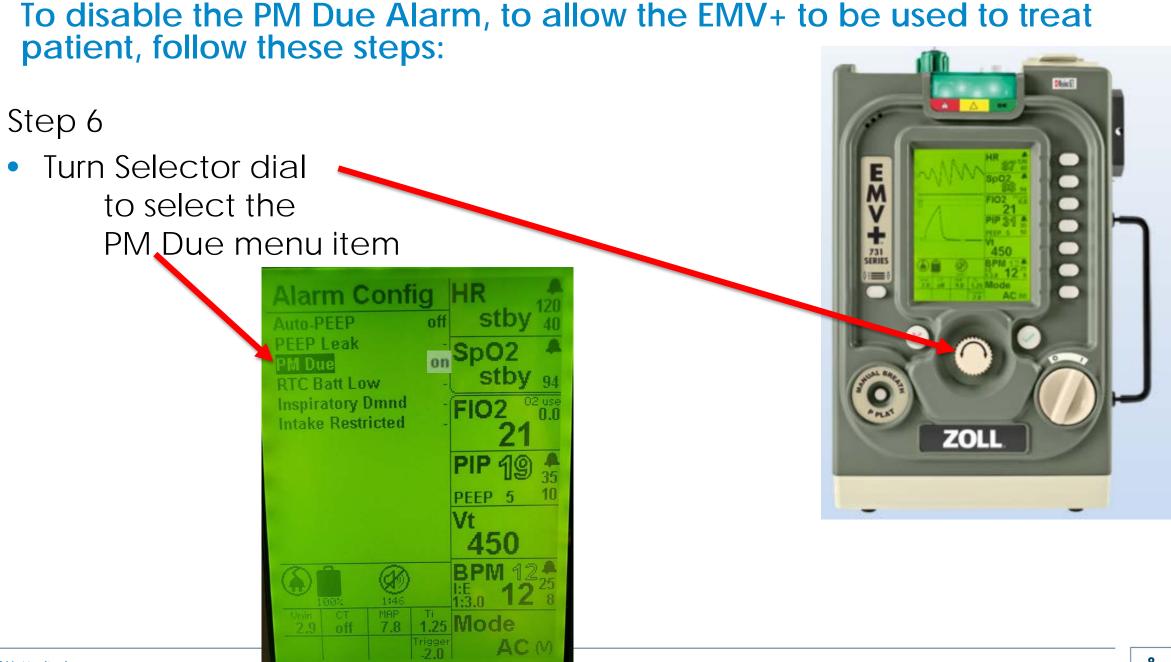


Step 7


Press Green "√" ACCEPT

Note: After the "Accept" button is pressed the PM Due "ON" will be selected, allowing you to change the alarm mode.

Alarm Config HR Auto-PEEP stby LED Loak **PM Due** stbv **RTC Batt Low Inspiratory Dmnd** FI07 Intake Restricted PEEP 125 Mode 4.2 7.9 off



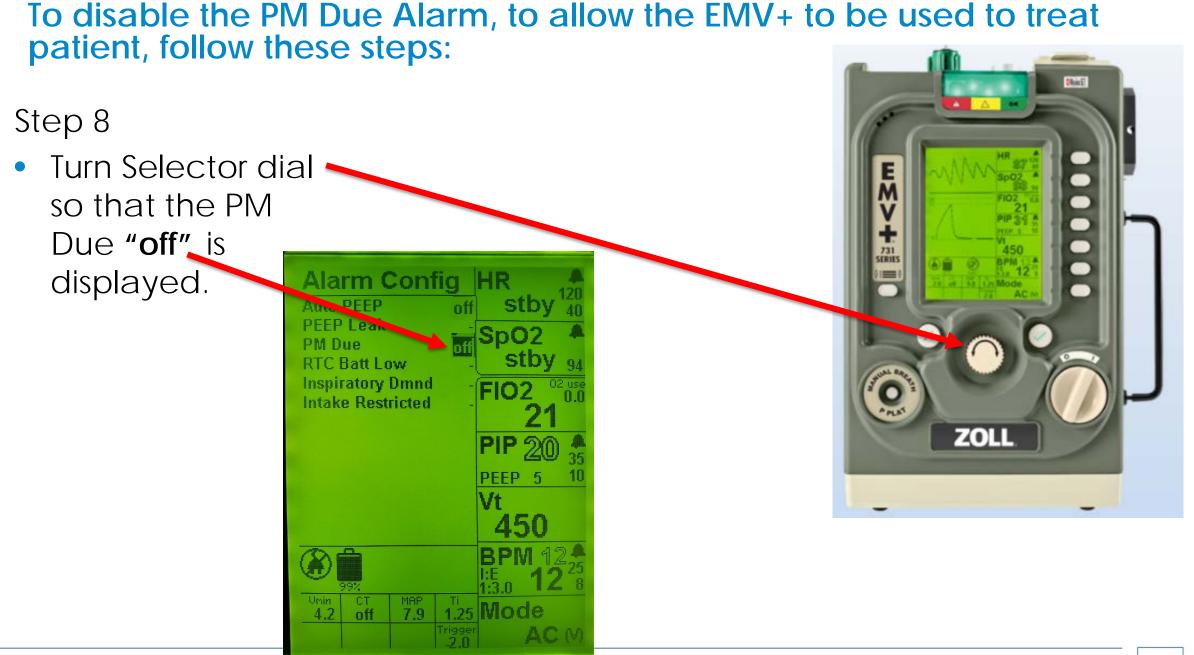

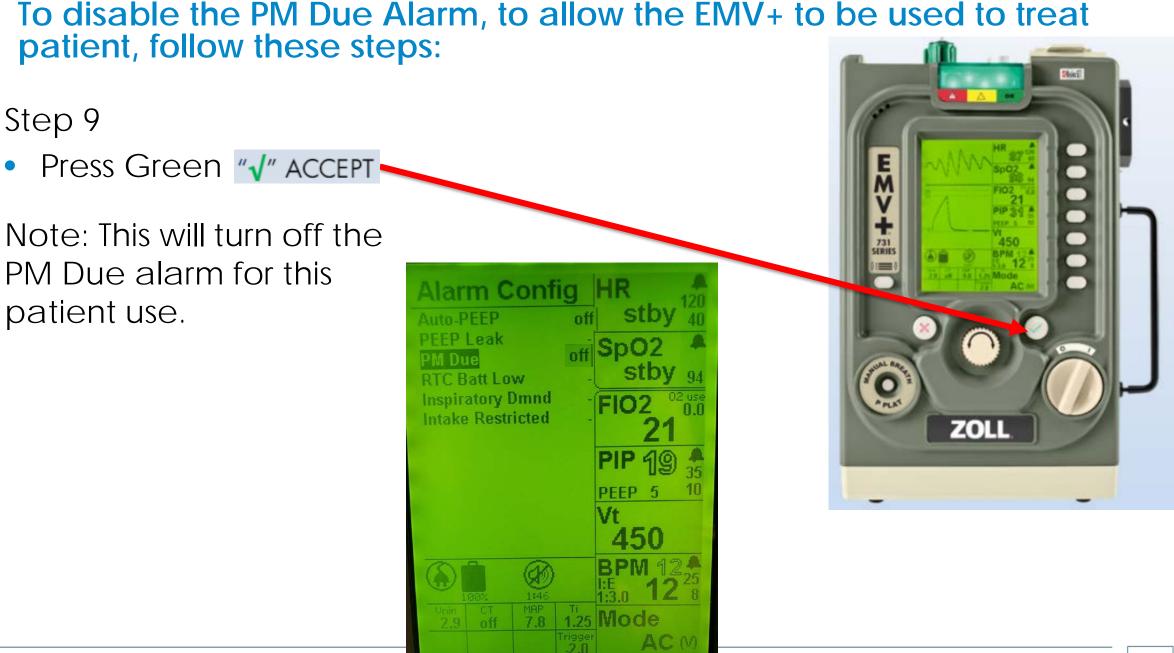

Step 10

 Press Red "X" button 3 times to exit all menus.

Note: This will allow you to adjust ventilator settings to treat the patient.

The PM Due alarm will activate again on a power ON cycle. The above steps will need to be performed to disable the PM Due alarm for the next patient.



THANK YOU

Please contact ZOLL Technical Support at <u>milsupport@zoll.com</u> for any additional questions or support.

© 2021 ZOLL Medical Corporation All rights reserved.

ZOLL Medical